



# Freeze Position

## Adjusting the 'Freeze Position'

The Motion(Sound)Mount app gives the user the ability to 'freeze' the tv position. When the 'freeze position' is turned on, the MotionMount remembers the current position. The next time the TV is turned on, the Motion(Sound)Mount will return to this position. When this function is turned off, upon turning on the TV, the Motion(Sound)Mount will return to the last used position before the TV was turned off.

\*Note: When the 'freeze position' is turned on while the TV is flat against the wall, the Motion(Sound)Mount will go to this position when turned on. Since the MotionMount is already at the preset position, it will seem defect. Use the app to turn the 'freeze position' off. Manually go to any desired position and turn the 'freeze position back on'



