 
 
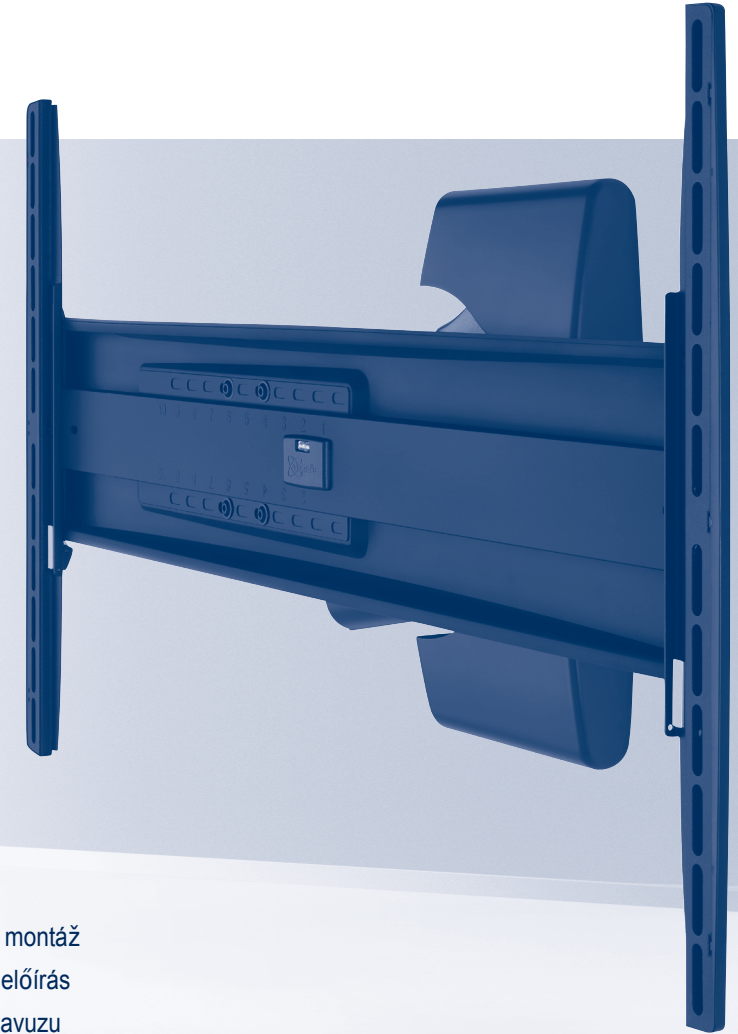 
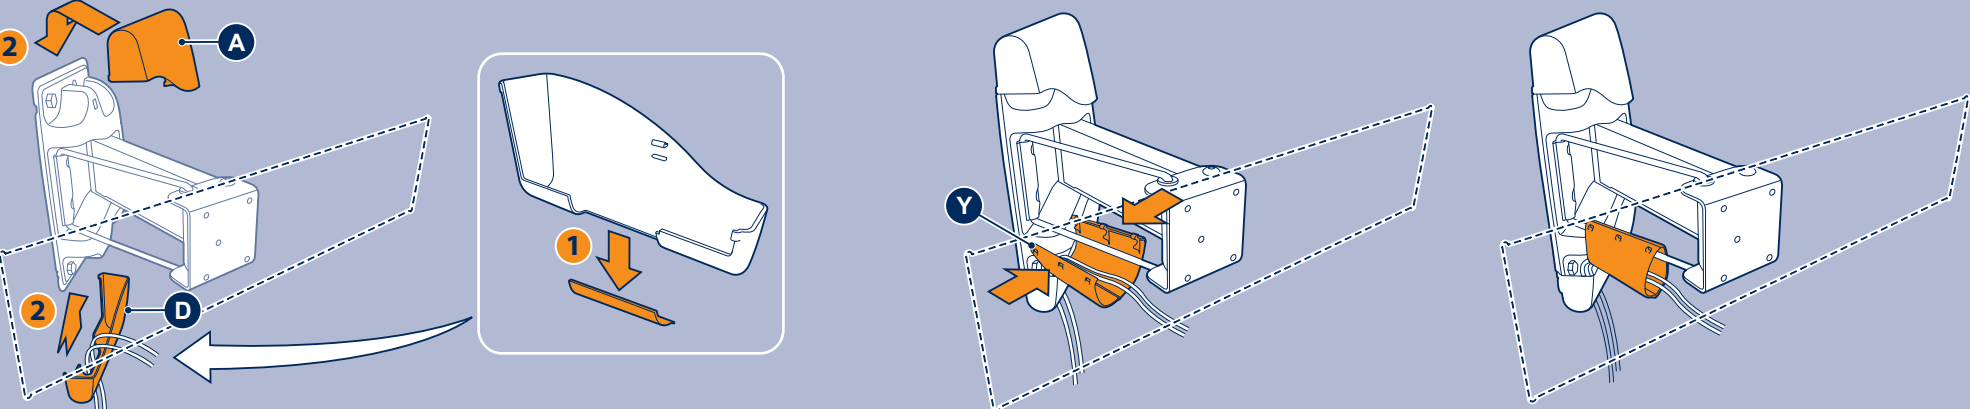 
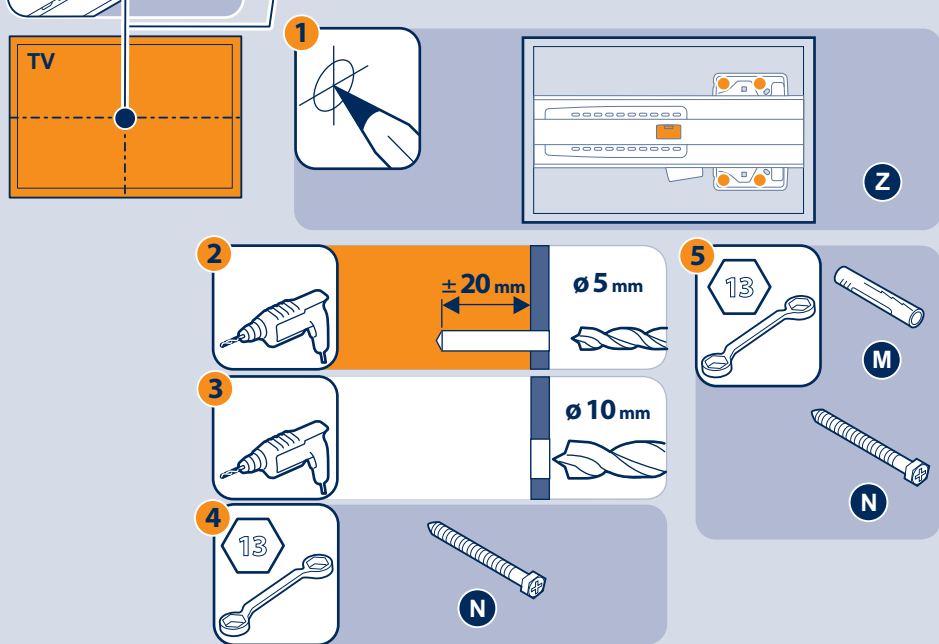 
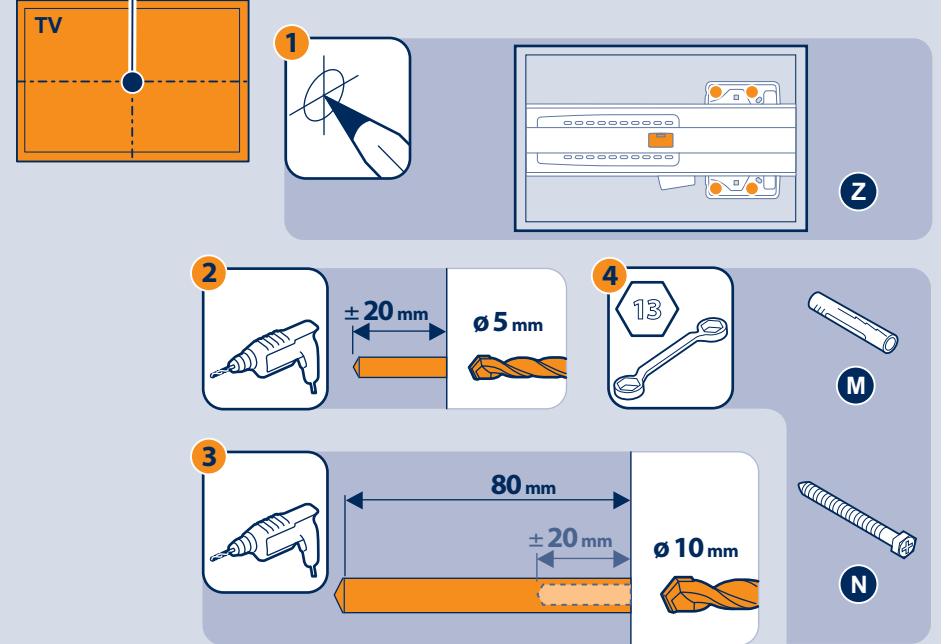 
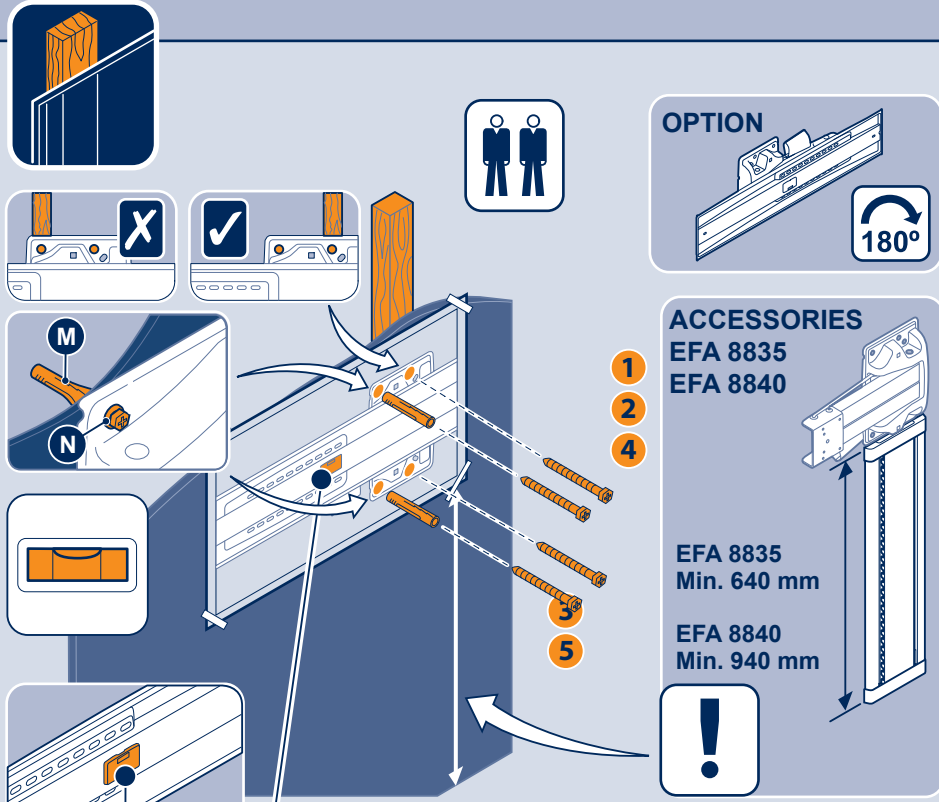 
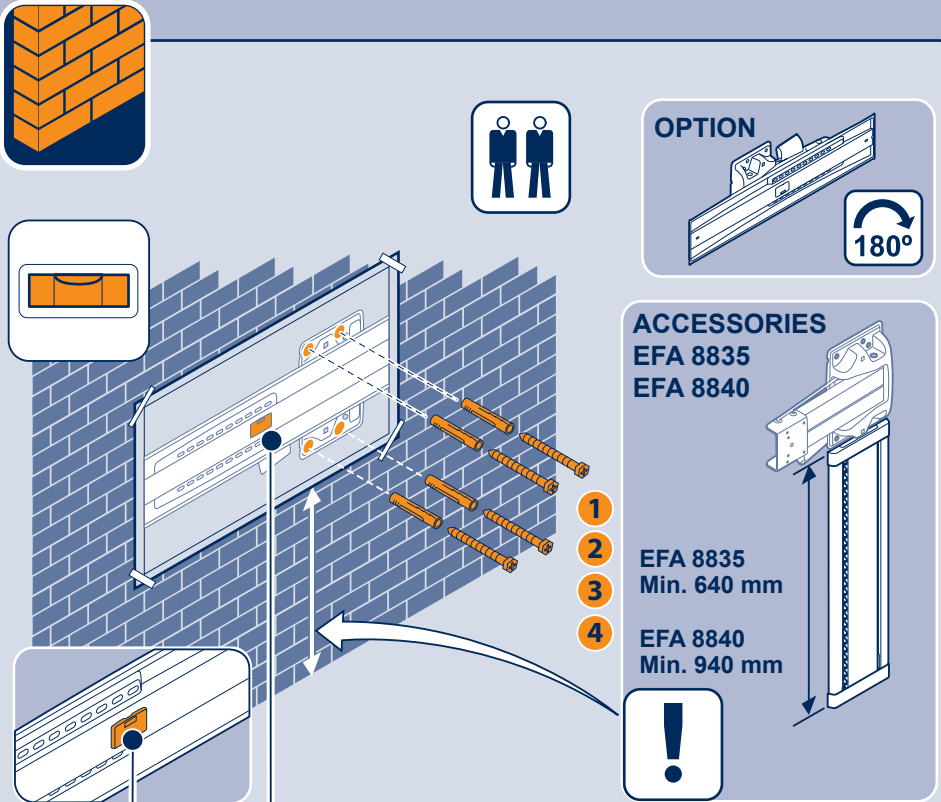 
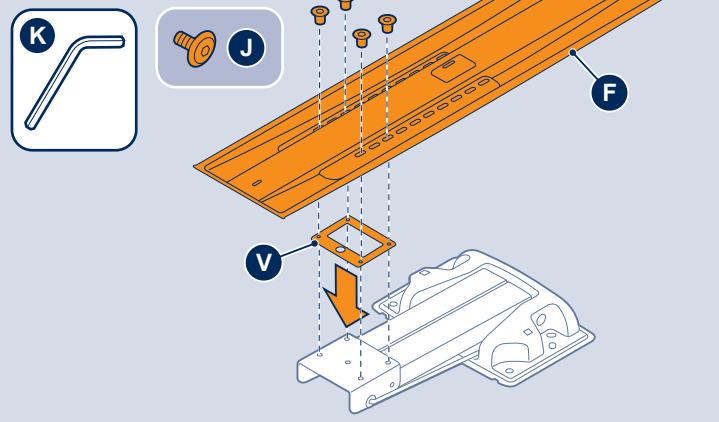 


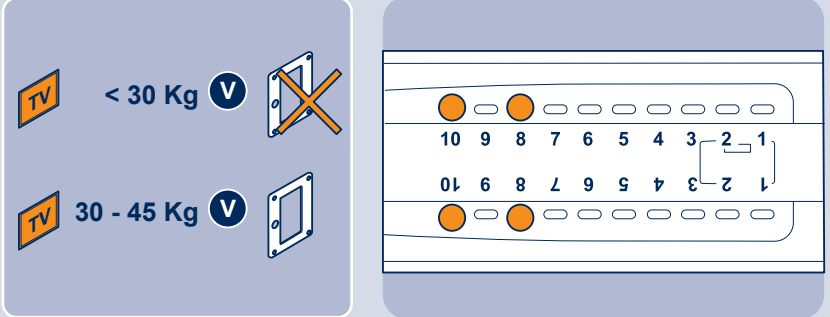

EFW 8325

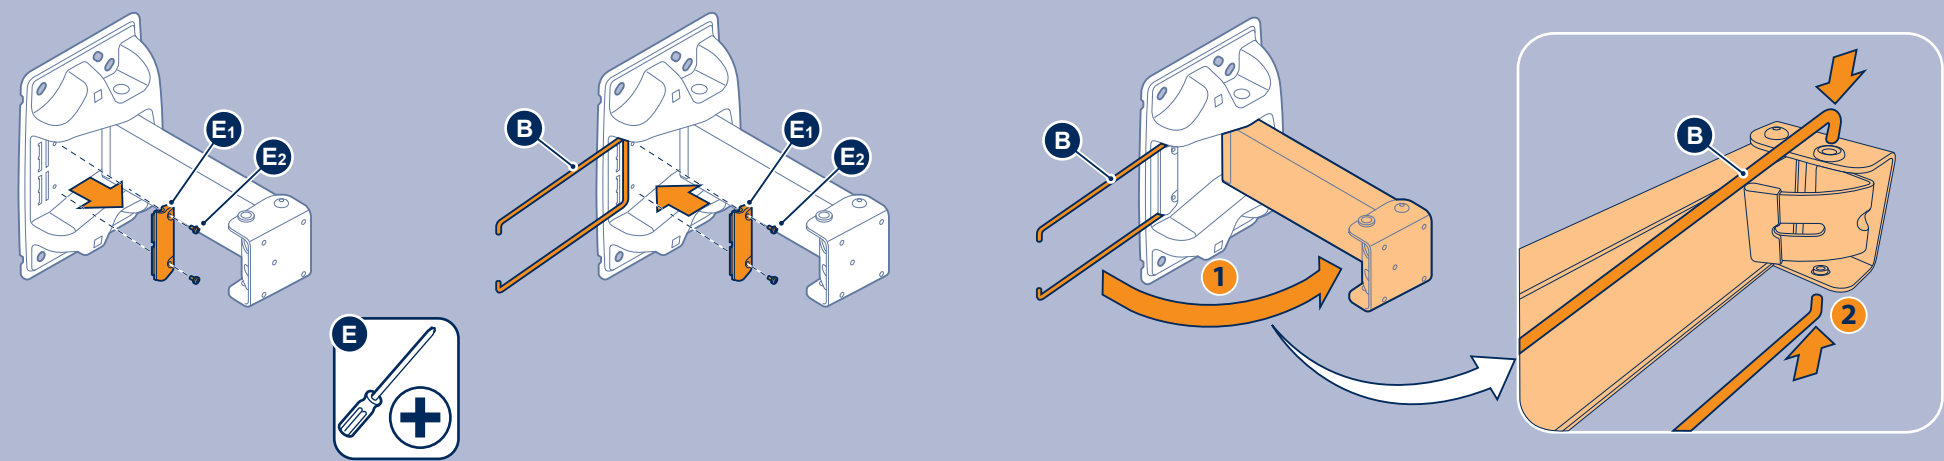

Important
Wichtig
Important
Belangrijk
Importante
Importante
Viktigt
Ważne
Важно
Důležité
Dôležité
Fontos
Önemli
Important

Mounting instructions
Montageanleitung
Consignes d'installation
Montagevoorschrift
Instrucciones de montaje
Istruzioni di montaggio
Manual de montagem
Montageföreskrifter
Instrukcja montażu
Инструкция по сборке
и установке
Návod k montáži
Návod na montáž
Szerelési előírás
Montaj kılavuzu
Instrucțiuni de montaj
Вказівки по монтажі
設置の説明書

1 2 3 4 5 MOUNTING INSTRUCTIONS

 
Visit www.vogels.com for more information

2 x 45° POSITION




OPTION A

1 x 45° RIGHT
WITH SPS® & SMM®

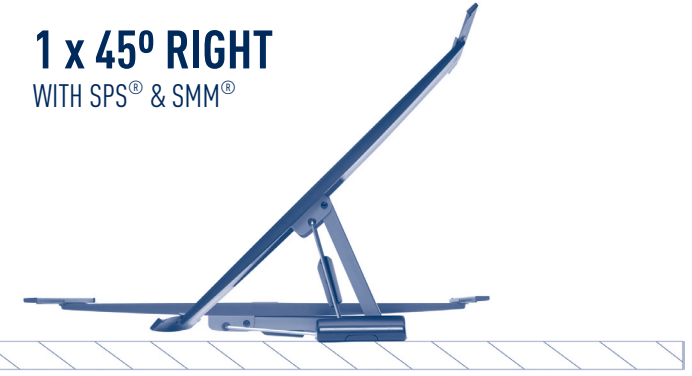

OPTION B

 
1 x 45° LEFT
WITH SPS® & SMM®

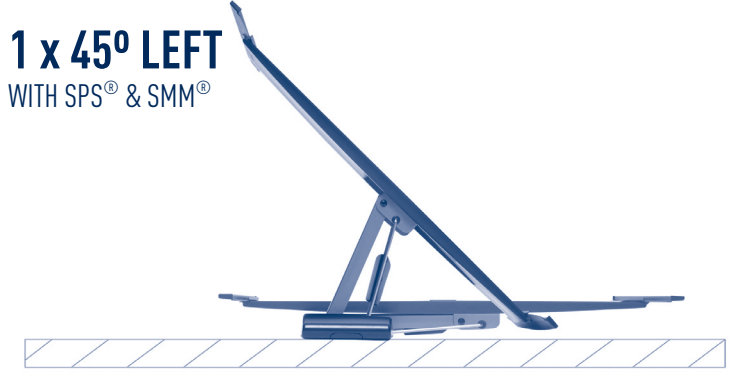


2 persons required
Zwei Personen erforderlich
Nécessite deux personnes
2 personen
Se precisan dos personas
E' richiesta la presenza
di due persone
Requer duas pessoas
Två personer erfordras
Koniczne dwie osoby
Нужны два человека
Montáž vyžaduje 2 osoby
Montáž vyžaduje 2 osoby
Két személy szükséges
Íki kişi gerekli
Este nevoie de două
persoane
Для монтажу необхідно 2
людини
Необходими са двама души
二人作業

DESIGNED AND ENGINEERED
IN THE NETHERLANDS
MADE IN THE P.R.C.
VOGEL'S PRODUCTS BV
NL 5628 DB EINDHOVEN
WWW.VOGELS.COM

 PARTS INCLUDED

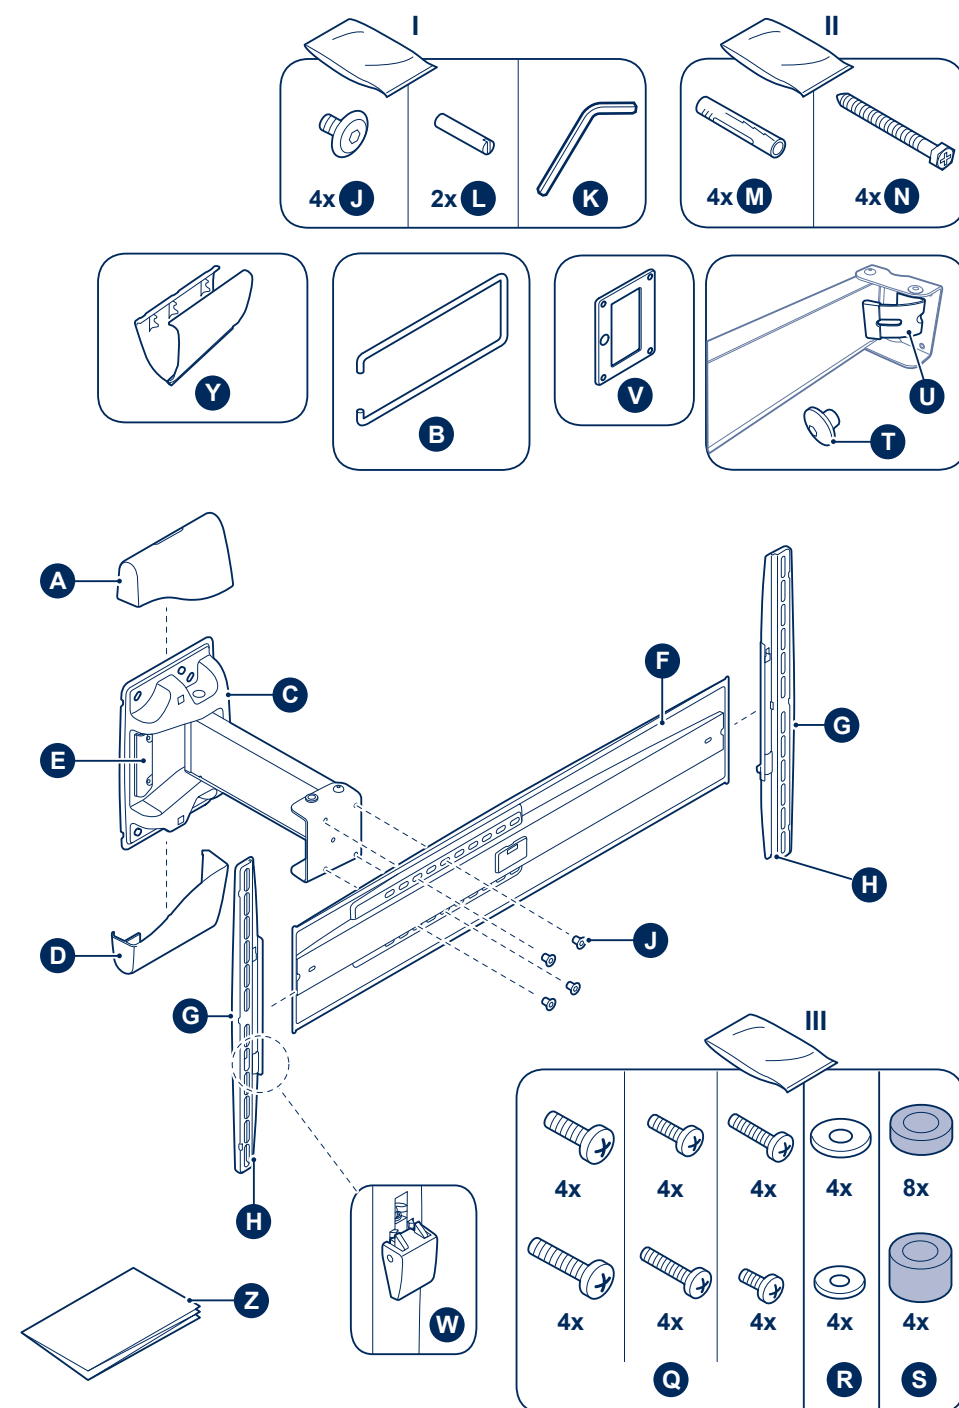


TOOLS REQUIRED NOT INCLUDED

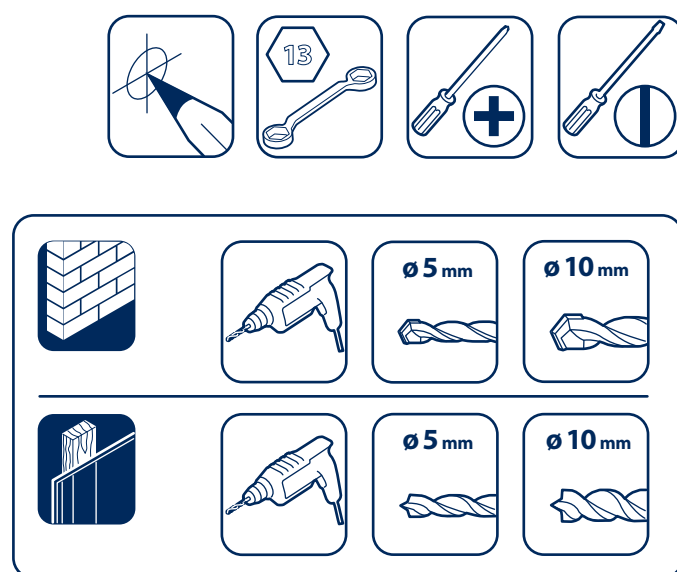 


2

 
FOR OPTION A & OPTION B
(1 x 45° WITH SPS® & SMM®)
GO TO DRAWING **OPTIONAL 2/3**

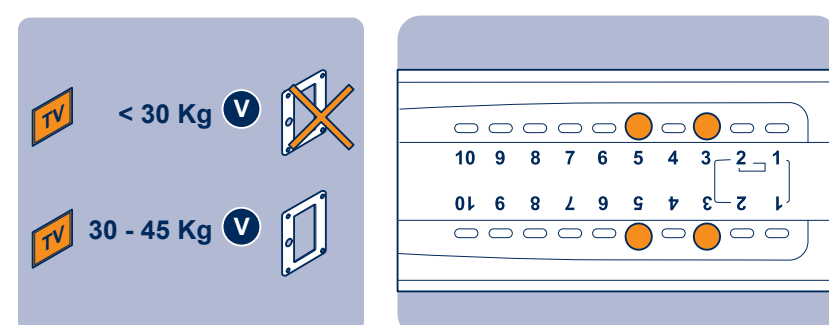


1

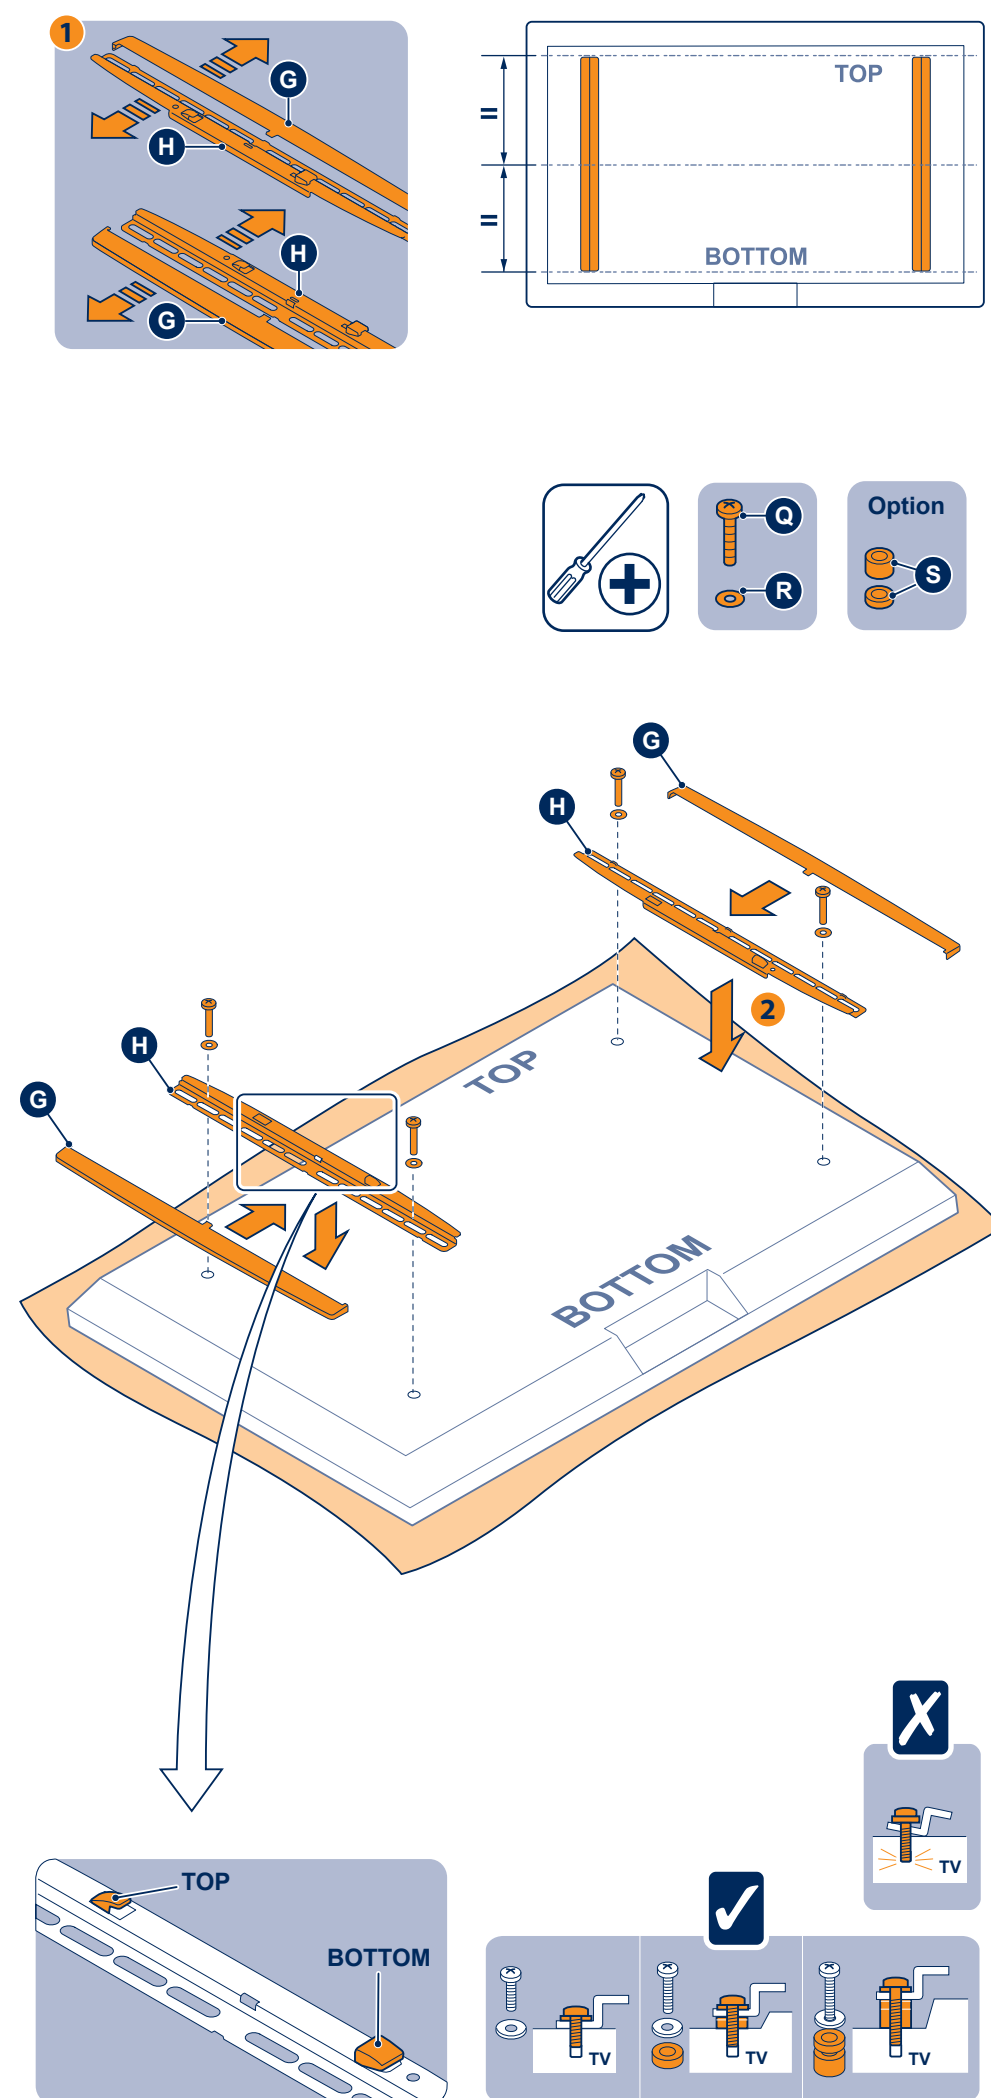 


3

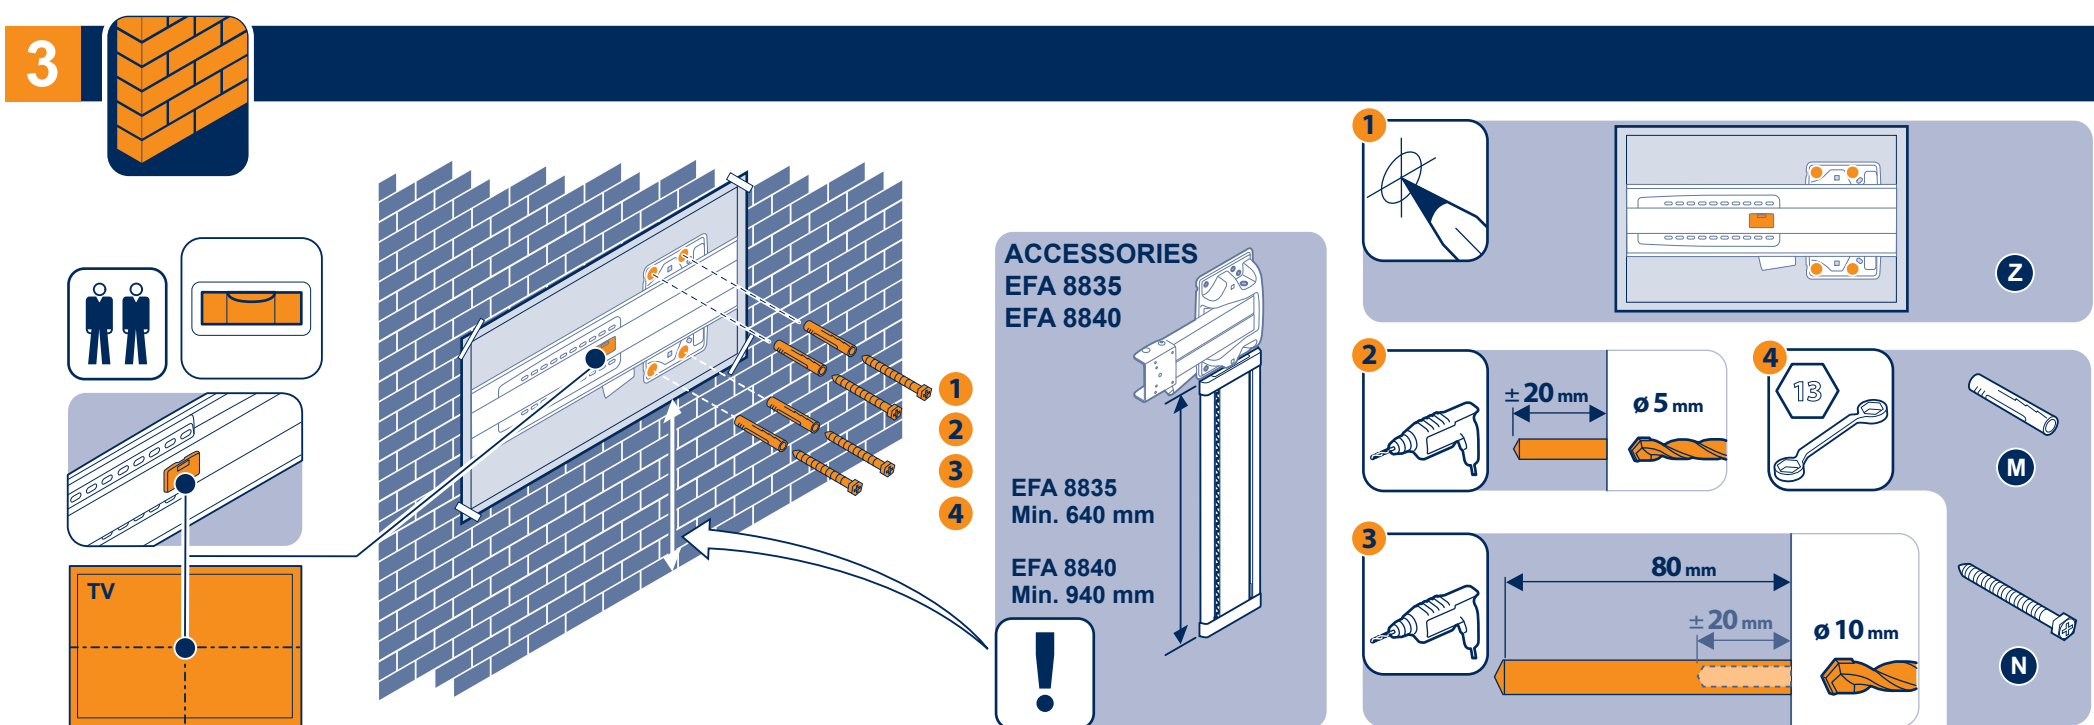 

4

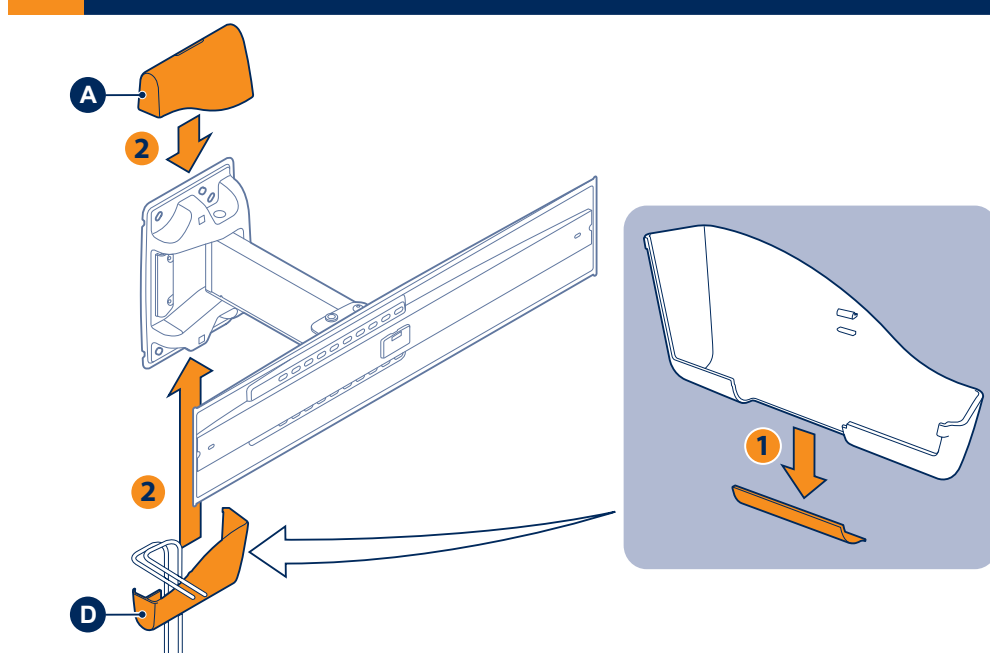 

5

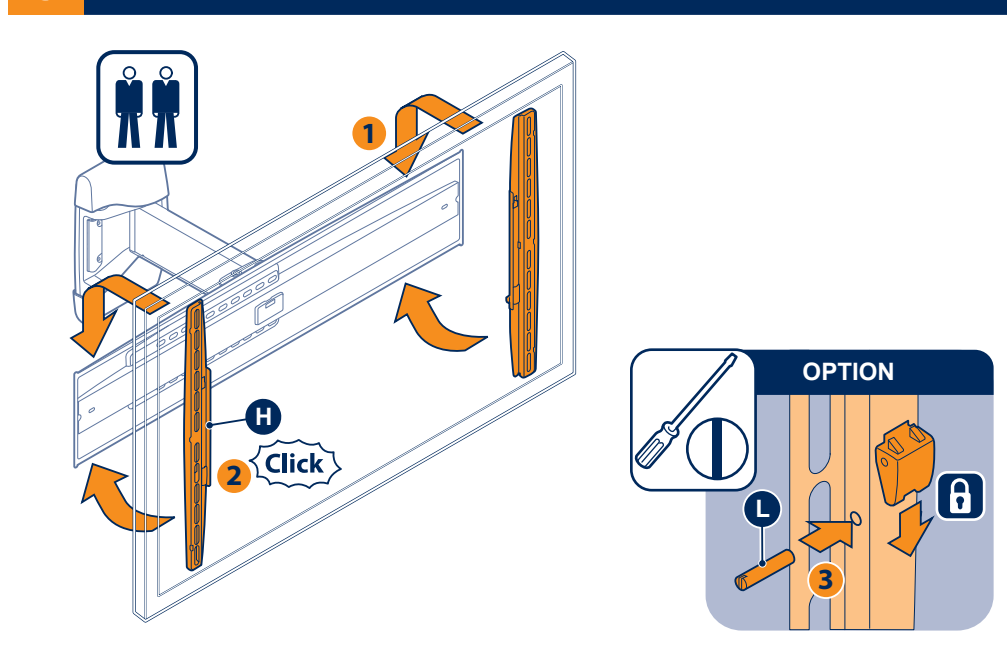 

REMOVE TV FROM WALL MOUNT

- TV von Wandhalter nehmen
- Retirer le téléviseur du support mural
- TV van muursupport afhalen
- Quite el televisor del sistema de montaje en la pared
- Rimozione della TV dal sistema di fissaggio a parete
- Retire a TV do suporte da parede
- Avlägsna TV:n från väggmonteringen
- Zdejmij telewizor ze ściennego uchwytu
- Снятие телевизора с устройства для настенного крепления
- Sejmuti televizoru z držáku na stěnu
- Zvesenie televizora z držiaka na stenu
- A TV eltávolítása a fali tartóról
- TV'yi duvar dayanağından çıkartın
- Îndepărtati televizorul de pe suportul de perete
- Зняття телевізора з кронштейна на стіні
- Откачване на телевизора от стойката за стена
- テレビをウォールマウントから取り外す

