

## Adjusting the Automatic MotionManagement

When the Motion(Sound)Mount does not behaves accordingly, Automatic Motion Management can be adjusted depending on the TV. After the Motion(Sound)Mount has been connected with the app, go to settings and to Automatic Motion management. There are three settings:

- 1: Normal; this is the default setting which works for most TV's.
- 2: When the TV starts moving on its own while the TV is on, set the Automatic Motion+ Management to Low. (C1)
- 3: When the TV starts moving while the TV is off, set the Automatic Motion Management to High. (C2)

